

# BORUM LINEMASTER TUTORIALS

The LineMaster is attached to the operator's section of the machine and gives you full control of all your line marking tasks, from line application and pre-marking to reporting and invoicing.

All line marking functions are controlled from this unit, which makes Borum road marking machines simple and easy to use.

**In this document, you can find links to all the Linemaster video tutorials.**

## 01.Menu

- [Overview of the Linemaster Menu](#)
- [How to Calibrate Pulse Transmitter - Animation](#)
- [How to Calibrate Pulse Transmitter – Linemaster screencast](#)
- [How to Change Time, Date & Language](#)
- [How to Use the Road Simulator](#)
- [How to Update the Linemaster](#)
- [How to Save & Load Settings](#)

## 02.Start

- [Overview of the Start Menu](#)
- [How to Change Between Auto / Semi / Manual](#)
- [How to use Automatic Mode](#)
- [Start Marking a Line](#)
- [How to Start Marking a Line](#)
- [How to Adjust Pump Speed](#)
- [How to Adjust Dots Per Meter](#)
- [How to Do Manual Marking](#)
- [How to use the manual function for testing](#)
- [How to Use Semi Mode](#)
- [How to Start with a Line / Gap](#)
- [How to use Counter Auto & Manual](#)
- [How to Stretch and Shrink a Line](#)
- [How to Fill Screedbox Manually](#)

## 03.Lines

- [Setting up Lines in a Line Program](#)
- [How to Create a Simple 100/100 line](#)
- [How to Set Up a Line with a Solid](#)
- [Example of Two Broken Lines](#)
- [Solid and Broken Line Combined](#)
- [How to Delete a Line in a Program](#)
- [How to Premark](#)
- [How to Mark a Program](#)
- [How to Set Up Cycle-Warning](#)
- [How to do a Chess Line](#)
- [How to Combine Lines in a Program](#)

## 04.Edit

- [Complete Overview of Settings](#)
- [How to Adjust Shutter](#)
- [How to Use Beads](#)
- [Special Settings for Spray](#)

## 05. Info

- [Overview of the Info Menu](#)
- [How to Download Jobs](#)
- [How to Export Jobs to USB](#)
- [How to Set-Up a Job](#)
- [Start a job in the Linemaster](#)
- [How to Add Material](#)